



DC Smart Switch

USER'S GUIDE

Product Features

Congratulations on selecting this smart, web enabled DC power switch. Features include:

Simple Web Interface

The internal web server is accessible from any browser. Simply enter an IP. Configuration and control are web-based. A REST API is provided in addition to traditional HTTP controls.

AutoPing™ Reboot

AutoPing continuously monitors an IP address. If a server, router, radio or other peripheral goes down, AutoPing can automatically reboot it without user intervention. AutoPing can monitor several devices and multiple IPs simultaneously.

Dual 50A inputs, 8 Switched DC Outputs

Two input busses A&B are provided with separate 50A input breakers. Outputs 1-4 are powered from bus A. Outputs 5-8 are powered from bus B. On each output, a thermal circuit breaker (nominally 15A) protects against overcurrent.

Programmable LCD Display & Keypad

A 2x16 LCD displays status for each outlet. Custom messages can be displayed via user scripts. A keypad adds local control.

Multi-User Password Security

Multi-user authentication limits access. The administrator selects which relays each user can control.

Sequenced “On Timer”

A programmable delay timer switches circuits on in sequence, rather than simultaneously. Most devices draw a surge of power when initially switched on. Using this timer, more equipment can share a single circuit without overloads due to startup surge current. Lua scripts can be used to create customized power-up and shut-down sequences with variable timing.

MOV Surge Suppression

Eight 3600W metal oxide varistors clamp surges across the switching contacts.

Scripting Language, Syslog, and Utilities

Lua scripting can be used to create custom control and reboot sequences, schedule periodic reboots, etc. Internal and external event logs are provided.

New Features

New features include Email, SNMP and Jabber notification, longer clock battery life, HTTPS, WiFi support, SSH and Lua scripting.

Field Upgradeable Firmware

Firmware is field upgradeable via Ethernet.

Package Contents

- DC Smart Switch with input compression lugs, and output screw terminals.
- RP-SMA 2.4GHz WiFi Antenna
- Rack mounting brackets (front, center or rear mount).

Options


- Custom output breaker ratings.
- External contactors.

Inspection

Please contact the freight carrier immediately if your package appears opened or damaged in transit. Call DLI at (408) 330-5599 for tech support, service, and hardware upgrades. The product performs a brief self-test when first powered up.

Important Factory Defaults

IP: 192.168.0.100
User name: admin
(lower case)
Password: 1234

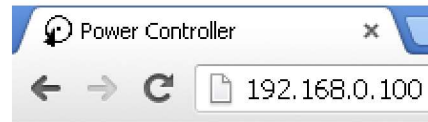

To reset to factory defaults, gently press the reset-to-defaults button below the LCD to enter the reset menu, then select a reset option.

User Name	<input type="text" value="admin"/>
Password	<input type="text" value="1234"/>

Quick Setup

Use these shortcuts if you are an experienced installer. We recommend reading the entire manual for first-time installation.

- Unpack. Save the carton. Attach the line cord. Connect power and loads. The switch can be installed “high side” or “low side”. Input can be positive or negative. Returns are bonded together.
- Attach an Ethernet cable from the controller to your LAN. Switch power on. If you are attached through a switch, you may need to power-cycle your switch to initially establish a connection.
- Ping the default address 192.168.0.100 to confirm that a network connection is established. If you don’t receive a response, proceed to the **IP Setup** section below.
- Log in to the switch using the default user name **admin** and the password **1234**. Note: “*admin*” must be entered in lower case.
- Click the **Settings** link to reach the configuration page. **Select the safest power-loss configuration** for your installation: (all OFF, all sequential ON, or pre-powerloss sequential ON) Note that pre-powerloss means the last previously configured state, and it does not take cycling into account. “Power loss” means <10.5V DC power for more than 100ms on both the A & B bus simultaneously
- Configure the switch as described below. After each change, click Submit and wait for the page to refresh before continuing.

Tip: A digital meter is handy for checking configuration and actual current drains.

IP Setup

If your network settings won't access the default IP, use a direct cable connection (temporarily bypass any switch or router) and follow these steps to add a compatible static IP, such as 192.168.0.50. Before adding an IP, close all programs and browsers. After the link is established, you can enable DHCP.

Windows Step 1

In Windows, the first step is locating the network adapter TCP/IP properties. The procedure differs for each Windows version:

Windows XP, 2000, 2003: Open **Start / Control Panel / Network Connections**. In "classic view", select **Start / Settings / Control Panel / Network Connections**. Right-click on **Local Area Network Connection** and select **Properties**. Proceed to step 2.

Windows Vista: Open **Start**, right click on **Network**, then on **properties**. Double click **Network and Sharing Center**, click **Manage Network Connections**. A Network Connections window appears. Right click on the network connection to the switch, ie. **Local Area Network**. Proceed to step 2.


Windows 7: Open the **Start orb**, click on **Control Panel**. Click **View Network Status and Tasks**, then **Change Adapter Settings**. Proceed to step 2.

Windows 8-10: Right-click on the Windows Start button. Select **Control Panel**. Select **Network and Sharing Center** or **Network > Network Settings**. Click **Change Adapter Settings** or **Adapter Options**. Right click on your connected network and select **Properties**. Proceed to step 2.

Windows Step 2

The second step is adding an IP such as 192.168.0.50. Temporarily disable DHCP while configuring the switch.

Select **Internet Protocol TCP/IP V4 Properties** and click **Properties**. Enter a compatible static IP such as:

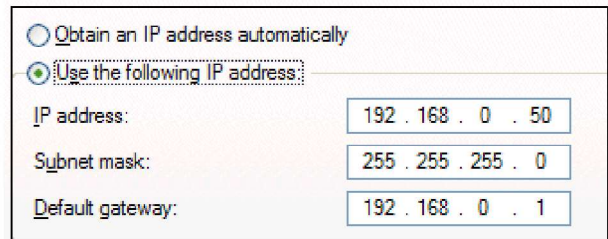

<input type="radio"/> Obtain an IP address automatically	
<input checked="" type="radio"/> Use the following IP address:	
IP address:	192 . 168 . 0 . 50
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	192 . 168 . 0 . 1

Click **Apply** and close windows. Ping to confirm the connection.

Point your browser to 192.168.0.100 Log in. Detailed instructions are at digital-loggers.com/ip_setup


Mac OS X

Turn **AirPort** off temporarily. Click the Apple logo, then **System Preferences**, then **Network**. Select **Built-In Ethernet** and then **Configure**. Under the **TCP/IP** tab, select **Manually** and enter an IP address such as 192.168.0.0 as shown:

Make changes shown. Point a browser to 192.168.0.100 Log in. Find Mac setup details at digital-loggers.com/mac_ip_setup

Network Configuration

HTTPS is disabled by default. WiFi is enabled with a random key. Start by establishing a hard-wired network connection to

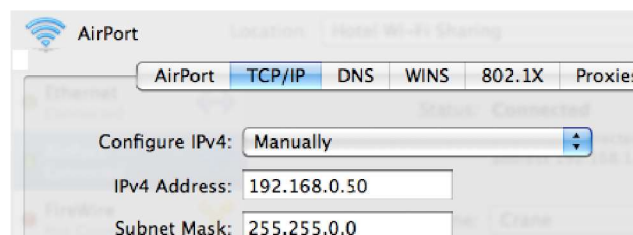

192.168.0.100, or use the LCD and keypad to display the default WiFi SSID and password. The **Settings** page controls network configuration:

General Network Settings	
HTTP Port	<input type="text" value="80"/>
Enable SSH Server	<input type="checkbox"/>
SSH Port	<input type="text" value="22"/>
Syslog Server	<input type="text"/>
Same subnet access only	<input checked="" type="checkbox"/>
<input type="button" value="Submit"/>	

LAN Configuration	
MAC Address	<input type="text" value="7C:E1:FF:00:00:00"/>
Protocol	<input type="text" value="Static IP"/>
IP address	<input type="text" value="192.168.0.100"/>
Subnet mask	<input type="text" value="255.255.255.0"/>

The IP address of the controller needs to match the “class C” of your system. In other words, the first three bytes (192.168.0) must match the IP on your computer to access the Pro. Using a ping utility is a good way to confirm a valid network configuration. An “unreachable” report from Ping indicates misconfigured network settings.

Once you have a connection, the switch may be operated via a web browser. To access the Pro, enter the IP address in the URL field of your web browser. The default is http://192.168.0.100 SSH is disabled by default.

After setup, the HTTP and SSH ports (if enabled) may be moved to improve security. For example, changing the HTTP port to 2015 requires a browser URL of 192.168.0.100:2015 to reach the switch. **Note that some browsers will deny connections to ports under 1024.**

Home (Outlet Control) Page

DIGITAL LOGGERS, INC. Ethernet Power Controller

Controller: WISP Outpost 2
Thu Mar 31 11:36:19 2016

Individual Control

#	Name	State	Action
1	DSL Router 1	ON	Switch OFF Cycle
2	Cable Router	OFF	Switch ON
3	Nanostation E	ON	Switch OFF Cycle
4	Nanostation W	ON	Switch OFF Cycle
5	Backhaul Link	ON	Switch OFF Cycle
6	Beer Fridge	ON	Switch OFF Cycle
7	Firewall	ON	Switch OFF Cycle
8	Congressional O2 Supply	ON	Switch OFF Cycle

Master Control

[All Outlets OFF](#)
[All Outlets ON](#)
[Cycle all Outlets](#)

Sequence delay: 3 sec.

Version 1.8.1 (Dec 18 2014 / 09:00:17)

To access the home page, first enter the controller's IP address in the browser URL field, then log in. User **admin** has access to all features. Other users have limited access to circuits as assigned by the administrator.

Relay Control

Clicking "Relay Control" links to the home page used for manually switching circuits on and off. Access to specific circuits is determined by user-name. Admin controls all circuits.

Setup

The setup page lets you set outlet names, create web links, adjust startup delays, and set a power loss recovery mode. You can also add user accounts and change login credentials on this page.

Scripting

The Lua language lets you easily customize the switch. Scripts may be started manually, automatically on power-up, by external http commands, or by AutoPing events. Find a list of commands and examples at: digital-loggers.com/scripts.html

AutoPing

The AutoPing page lets you set parameters to automatically

reboot attached equipment. First, specify an IP address to ping. Next, adjust the timing settings and use the checkboxes to link the IP to power circuits. For example, if a router is unreachable, you may choose to automatically reboot both a router and a switch attached to two different circuits. Learn more on page 13 and at digital-loggers.com/AutoPing

System Log

The switch keeps internal event logs including logins, outlet switching, errors, and AutoPing events. Recent events are stored in the log and accessible from the System Log page. SYSLOG export is supported. More information: digital-loggers.com/syslog.html

Logout

Browser logout is automatic when a session is closed or after a time-out period. Use this link to log-out in advance.

Programmable Web Links

User-defined web links are provided. Set names and destination URLs for these links on the **Settings** page. These are convenient for connecting to other power controllers, linking to page hosted elsewhere, and for starting scripts.

Switching Circuits On and Off

The relay control page lets you control any circuit. The master control lets permitted users switch all circuits on or off.

To switch a circuit, simply click to the right of the relay name or number. On->Off switching is immediate Off->On switching speed is limited by the adjustable On Sequence Delay setting.

Use the keypad for local control: Select an outlet using the arrow keys, then press on, off, or cycle. Press ON or OFF for 5 seconds to lock or unlock an outlet. Locking prevents web access. To change the display mode, press the up and down arrows simultaneously. The keypad may be disabled on the Setup page.

You may also want to Cycle an attached device. This feature is

useful for rebooting Ethernet devices which may interrupt the web link to the switch. Clicking **Cycle** switches power off, waits for the **Cycle time**, and then switches power back on while conforming to the ON Sequence Delay. This can be used to restore connectivity).

You can also cycle all relays using the Master Control on the bottom of the page. An adjustable ON sequence delay takes effect when relays are turned on one after another, either when using the button, on power-up, or when switching manually using the front panel. This prevents power surges. A *separate* Cycle delay setting is provided on the setup page.



Depending on your web browser settings, you may need to click the Refresh button or F5 key to update the on-screen status display after changing settings. Screen refresh rate is adjusted in two places: on the Setup page and in your browser settings.

Setup Page

The **Setup** page allows the admin to configure:

Controller and Outlet Names

Use the controller name field to assign a name to the switch. An example is **Rack 4 PDU**. The Controller Name will appear on top of all pages. Assign a separate name to each outlet, such as **DSL Router 1** or **Wireless Link** to aid identification. Check the **Confirm** box to the right of the outlet name if you prefer a pop-up window confirmation before switching critical circuits.

Power-On Sequence Delay

When a time value is entered in the **All ON Sequence Delay** field, the switch will pause for a period of time before switching each outlet on in sequence. This delay helps prevent power surges and blown circuit breakers which can occur when multiple devices are switched on simultaneously. A delay of 60 seconds is suggested for server applications.

You may also enter a screen refresh delay in this section. If **Enable screen refresh** is checked, and a delay value is entered, your browser should periodically update the status screen.

Wrong Password Lockout

After three failed login attempts, the switch may be set to ignore login attempts for a period of time (0-60 Minutes).

Power Loss Recovery Modes

The power loss recovery mode setting has a very important setting that determines operation after a power failure:

When recovering after power loss	<input type="radio"/> Turn all Outlets off
	<input type="radio"/> Turn all Outlets on (in delayed sequence)
	<input checked="" type="radio"/> Return to pre-powerloss state

1. Turn all circuits off (all systems will be switched off until manually turned on later, possibly by a script).
2. You can automatically turn all circuits on using the sequence delay timer described above.
3. You can return to the same power settings that were used prior to the power loss. ie. 1 On, 2 Off, etc. The ON Sequency delay timer is used here as well.

Note: If you have written a power-on script, the recovery mode takes effect before script execution begins. Scripts start after self-test, approximately 30 seconds after power-up.

User Defined Links

Add hyperlinks to other power controllers, your own web pages, or remote web sites by entering URLs in the **Setup** page. For example, enter "Site Two Power Controller" in the description field and a URL of "192.168.0.250" These links appear on the left side of the web pages.

Access Control

The administrator can grant users access to only certain circuits. To set permissions, login as admin first, then create a permissions

matrix by entering user names on the left and checking allowed circuits on the right.

Network Settings

A valid fixed IP address, network mask, and gateway must be entered in this section.

When changing IPs, you may need to restart your network switch to validate the new IP on an “auto-configuring” switch port. *Be sure to record the new IP address.*

Use the **Protect** button to lock the network settings. *Once protected, the network settings cannot be changed except by pressing the physical reset button near the Ethernet jack.*

AutoPing™

AutoPing Operation and Settings

AutoPing is an automatic system for rebooting IP equipment without human intervention. AutoPing will monitor a device. If it stops responding, AutoPing can cycle power to reboot it. For example, you might use AutoPing to monitor an external multi-cast IP to automatically reboot a DSL router or WiFi AP.

To use AutoPing, first add an IP address. Next, link that IP address to one or more outlets. Timing settings must be considered.

Add IP Address to AutoPing

Use this option to specify the address of an IP device you wish to monitor. After entering the IP address, the settings page will refresh and you can select the outlets associated with this address. Use the checkboxes in the AutoPing section to correlate the IP address to one or more outlets. If communications to the target IP is lost, these outlets will be rebooted. Four main parameters control AutoPing:

Time between pings

This is the time between each “ping” check of the IP address. 60 seconds should be useful for most applications.

Ping failures before reboot

This sets the number of failed communications attempts that must be sequentially detected before a power cycle. For example, when set to 5, the target system must fail to respond 5 times in a row before it is rebooted. Since occasional network timeouts and packet loss can occur during normal Ethernet operation, between 5 and 10 pings is suggested.

Times to Attempt Reboot

If you have an unreliable target device, or one that may be damaged by excessive power cycling, you can limit the number of times it will be rebooted here. For example, entering 5 to reboot your server up to 5 times before giving up.

Device Reboot Delay

After power cycling to reboot a device, a waiting period will occur before the IP address is re-checked by AutoPing. This delay allows the device time to reboot. Most devices take some time to reboot. Windows and Linux servers can force automatic file system checks which may take several minutes to complete. To allow for startup delays, enter a time delay in the **Device Reboot Delay** period. For example, a reasonable value for a typical server might be 10 minutes (600 seconds). Entering 600 would cause the power controller to start checking the server for normal IP operation 10 minutes after reboot.

Learn more: digital-loggers.com/AutoPing2.html

AutoPing Example

In this example, we use AutoPing to automatically reboot a DSL router. Since the switch is connected inside the router, we select a target IP of 8.8.8.8 This is a multi-cast address which connects to a multitude of Google name servers. We can safely assume

that if none of them respond, we have lost network connectivity.

We connect a router to outlet 1, enter the external IP on the left, and leave all timing values at defaults.

AutoPing														
IP(€)	Reboot Outlets								Script	Action	Stats			
	1	2	3	4	5	6	7	8			TX	RX	HIT	
<input type="checkbox"/> 8.8.8.8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	[Cycle]	<input type="button" value="+"/>	0	0	0	
AutoPing Properties														
Enable AutoPing:										<input type="checkbox"/>				
Time between pings:										30	seconds. (2-3600)			
Ping timeout to reboot:										150	seconds. (2-3600)			
Ping responses to enable autoping:										5	pings. (0-100)			
Times to attempt reboot:										5	tries. (1-255)			
Device reboot delay:										120	seconds. (1-43200)			

Internet Access

Like to access your switch over the Internet? Learn how to configure your router at portforward.com A firewall is recommended.

Mobile Device Access

Non-admin accounts have a simplified UI suitable for mobile devices with small screens. Third-party applications are available to control various DLI products from Android and IOS. These apps are sold and supported by independent developers, not by DLI. Learn more: digital-loggers.com/mobile.html

Real-Time Clock

An internal Real-Time-Clock (RTC) is provided. This clock can be set manually using the **Date/Time** link. The time zone is set based on GMT. Batteries have an estimated 15-year lifetime.

Lua Scripting

The controller can be customized using the Lua language. A full description is beyond the scope of this manual, so please visit these sites:

lua.org

digital-loggers.com/scripts.html

Safety Shutdown

The switch uses thermal circuit breakers for safety. In the event of an overload, a breaker will trip. Correct the situation by removing excessive load, then allow a minute or two for the breaker to cool. Cycling power on and off with the red rocker switch resets the breaker. The maximum rated current is 15A.

Open Source Code

In compliance with the spirit of the GNU public license, source code is provided for reference. Purchasing a TLA and signing an NDA from Atheros / Qualcomm is highly recommended before attempting any custom development. DLI can't provide warranty or offer tech support for modified units. We abide by the NDA.

Technical Support & FAQs

Please register. Painless on-line registration gets you free tech support, access to firmware updates, and information when updates and new features become available. Use the following QR codes for current manuals, and do take advantage of the FAQ page:

digital-loggers.com/dc3faqs.html

Your Suggestions Are Appreciated!

At DLI, we listen to customers. Please send suggestions to engineering@digital-loggers.com.

Latest Manual



FAQs



AutoPing



AC Model



Scripting



DLI Homepage



Specifications

Alert Beeper	73dBa at 12". Programmable.
Applications	Commercial, industrial power distribution. and remote reboot. Indoor use only.
Circuit Breakers	Manual reset, 15A-50A Thermal Supplemental
Clock / RTC	15 year Li battery, under 2 grams
Controls / Display	Reset -to-factory-default switch, 2x16 Backlit LCD w/ PowerSave, 5 button keypad
Enclosure	Steel, double grounded. Vented 4 sides.
Ethernet Interface	10/100 autosensing, Static IP, TCP port selectable, 8 pin RJ-45 w/ internal FCC filtering, WiFi
FCC Testing	Part 15 FCC ID 2ACIU3C3
Humidity	8-80% RH Operating
Input Terminals	Two 50A copper compression lugs
Output Terminals	Eight 15A screw terminals
Power Input	2x50A, 12-72VDC, positive or negative ground
Operating Temperature	-30° to 170°F, -34° to 77°C
Options - Factory	Custom breakers. External contactors.
Power Input	DC only, 12-72V, positive or negative ground
Power Supply Rating	12-72VDC. Undervoltage lockout at 11.3V
Password Transmission	Encrypted, base 64 or HTTPS
Power Dissipation	5.9W Typ Max (all on) <3 W idle
Power Fail Hold-Over	100ms minimum (all relays on)
Power-Up Modes	Last used settings, all power on or off, sequential on or run user-script ~30s after power-up
Relay Specs	40A AC NO, 1/2HP, 12V DC coil
Surge Protection	3600W Metal Oxide Varistor
Size	1.75 (1 RU) x 9.0 x 19.0"
Weight (packed)	Single unit 11lbs 4.8kg
WiFi	Atheros 9331 2.4G 802.11n RP-SMA - FCC Note: The switch may only be used with (1) the manufacturer supplied antenna (Gain: 2.0dBi), or (2) a 50 Ohm antenna of equal or lesser gain.

Limited Five Year Warranty

The terms of this warranty may be legally binding. If you disagree with the terms below, return the product immediately in original unopened condition for a full refund. The purchaser assumes the entire risk as to the results and performance of the unit. DLI makes reasonable efforts to ensure that this power controller is free of major defects. No agency, country, or local certifications are included with this unit. It is the responsibility of the user to obtain such certifications if necessary for the customer's application. Buyer acknowledges and agrees that he is solely responsible for proper use, certification and safety testing of components supplied by DLI. DLI's entire liability and exclusive remedy as to defective hardware shall be, at DLI's option, either (a) return of the purchase price or (b) replacement or repair of the hardware that does not meet DLI's quality control standards and has been returned through proper RMA procedures. DLI's liability for repair or replacement is to DLI's customer ONLY. NO SUPPORT IS PROVIDED FOR MODIFIED FIRMWARE. MODIFICATION OF FIRMWARE VOIDS ALL WARRANTY. Warranty service requires an original invoice from DLI and an RMA number provided by technical support. RMA material must be shipped prepaid to DLI. RMA numbers are valid for 15 days from date of issue. This warranty does not cover products which are modified (including firmware modifications), subjected to rough handling, or used in applications for which they were not originally intended. Batteries are not covered under warranty. Physical damage caused by customer or in transit to DLI is not covered under warranty. Please insure your shipments. No oral advice or verbal warranties made by DLI's employees, dealers, or distributors shall in any way increase the scope of this warranty. DLI makes no warranty as to merchantability or fitness for any particular purpose. DLI assumes no liability for incidental or consequential damages arising from the use or inability to use this product. This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Since some states do not allow the exclusion of liability for consequential damages, some of the above limitations may not apply. Auto-Ping™ is a registered trademark of Computer Performance, Inc. Since this is a FLASH based product, firmware should not be updated over the Internet or a busy LAN. Packet loss could result in FLASH corruption, requiring mail-in service. This product is designed for indoor use only. It should not be used for outdoor, mobile, airborne, or FDA Class III applications.



DIGITAL LOGGERS, INC.

2695 Walsh Avenue
Santa Clara, CA 95051

Digital-Loggers.com
Support@Digital-Loggers.com



© 2017 DLI This product is protected by pending US patents and foreign patents
Released 5/21/2017

Related Products:



90-240VAC Smart PDU



Web Enabled DIN Relay



Web Power Switch Pro



Smart PoE Injector

Call (408) 330-5599



DIGITAL LOGGERS, INC.

2695 Walsh Ave, Santa Clara, CA 95051
(408) 330-5599 digital-loggers.com